



7 TIPS ON OPTIMALLY USING DISHWASHER

LET YOUR DISHWASHER DO THE DIRTY WORK FOR YOU. ENJOY TIME SAVINGS WITH BETTER HYGIENE SO YOU CAN SPEND MORE TIME ON WHAT TRULY MATTERS.

DISHWASHER-SAFE

Before loading your dishes, always check that they are dishwasher-safe to avoid cracking, warping or discolouration. In general, materials like aluminum, cast iron, pewter, brass, tin and bronze are not suitable for washing in dishwashers as they are sensitive to high heat.

DISHES FACING DOWN

Spray arms are located near the dishwasher center, below the baskets, spraying water upwards using powerful jets. Dishes that are facing down allows better washing results. Ensure dishes do not overlap, which may prevent water jets from reaching certain parts of the dishes, posing difficulty for thorough cleaning.

SELECTING PROGRAM

Choose the most suitable program for the load's washing needs. According to how soiled your dishes are, you can select a shorter running time, higher temperature, extra rinse, and provide a hygienic clean for baby bottles and utensils. Refer to user manual for detailed instructions

PLACE SETTINGS

A 'place setting' consists of the following table ware: soup plate, dinner plate, dessert plate, saucer, tall glass, cup, teaspoon, soup spoon, dessert spoon, fork & knife. Generally, a dishwasher with 12 place settings is ideal for a family of 4, 3 meals daily.

SCRAPE OFF LARGE FOOD PARTICLES

Large food particles may get stuck and clog the drain filter. For optimal washing results, ensure large food bits are scraped off with a spoon before loading the dishes in the dishwasher.

ORGANISING DISHES

Place less soiled dishes, or delicate pieces including porcelain or china in the top basket for gentler wash. Please heavily soiled dishes in the bottom tray for more intense cleaning. Taller items like pots and pans only fit in the bottom basket.

AVOID OVERDOSING DETERGENT

If you are not using a dishwasher detergent tablet, check the dishwasher manual for the recommended dosage of powder or liquid detergent. This ensures that the right amount is used for different cycles, for the



Make the switch to ELBA today!

ELBA EBDW 1481M WH

14 Place Settings | 8 Wash Programmes | Static Drying
Innowash 360° Water Spray System
Infinity Plus Cutlery Drawer | Adjustable Upper Basket